

COLLISION REPAIR INFORMATION

FOR THE TOYOTA DEALER


TITLE: SRS REPAIR PRECAUTIONS

PAGE 1 of 2

SECTION: ELECTRICAL BULLETIN #115

MODELS: ALL TOYOTA/LEXUS

DATE: NOVEMBER 2001

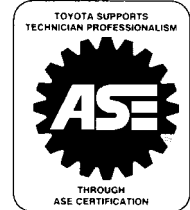

Supplemental Restraint System (SRS) components are designed to operate as manufactured, and **no attempt should be made to alter the original design**. Remember that authorization from the NHTSA must be received in order to install a Toyota manual on/off switch.

 
 
 
When not deployed, SRS components should be diagnosed and inspected using the model specific procedures found in the 'Supplemental Restraint System' section of the vehicle Repair Manual. When deployed, follow model specific SRS component replacement procedures.

Do not attempt to refinish or repair any SRS driver's airbag, passenger airbag, side airbag, or side-curtain airbag or parts. Repairing or refinishing any of these parts may alter the original design and may ultimately change deployment characteristics of these units. Damaged units should always be replaced with new parts.

Driver's airbag

Passenger airbag

Side airbag

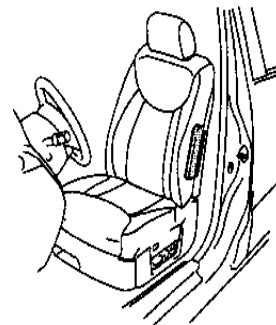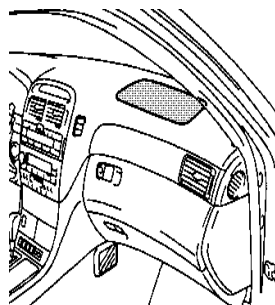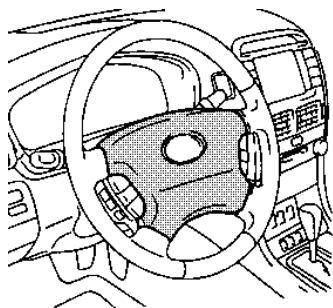

Always refer to model specific Repair Manuals for SRS information on the following topics:

• System Operation and precautions	• Diagnostic procedures
• Component locations	• Component replacement procedures
• Handling recommendations	• Collateral deployment effect
• Connector disconnect procedures	• Wire harness damage

PLEASE ROUTE THIS BULLETIN TO YOUR COLLISION REPAIR CENTER MANAGER
AND COLLISION REPAIR TECHNICIANS